

AUT1.3-DT1	AUTOMATIC TOUCH ON/OFF WITH TEMPERATURE CONTROL
AUT1.3-DTM2	AUTOMATIC METERED TOUCH WITH TEMPERATURE CONTROL
AUT1.3-DP3	AUTOMATIC TOUCHFREE WITH TEMPERATURE CONTROL
AUT1.3-DPM4	AUTOMATIC METERED TOUCHFREE WITH TEMPERATURE CONTROL

Features:

- Converts most Watermark deck mount single handle faucets to automatic
- No visible sensor – turns the spout itself into the sensor
- Battery operated – no need for hardwiring
- Safety timeout so water doesn't run indefinitely (DT1 and DP3 only)
- Metered option to satisfy local codes for public bathrooms
- Single handle controls temperature only

Specifications:

- Working water pressure: 20 PSI to 85 PSI
- Working water temperature: 45°F to 120°F
- Working environmental temperature: 35°F to 100°F
- Flow Rate: 1.2 GPM
- IP55 water and dust protection
- Requires one 6V CR-P2 lithium battery (**NOT INCLUDED**) to operate
- 12 second metering cycle (DTM2 and DPM4 only) provides 0.24 gallons per cycle
- Shipping weight (lbs.): 5
- Shipping dimension (in.): 29 x 12 x 4

Note:

- **WARNING: DO NOT INSTALL FAUCET OR FIXTURE ON METAL SURFACE OR IN CLOSE PROXIMITY TO ANY METAL COMPONENTS**
- DO NOT USE PLUMBER'S PUTTY ON ANY OF THE BRASS COMPONENTS
This will cause the finish to tarnish and void the warranty. A non-corrosive Alkoxy Silicone is recommended.
- COPPER ADAPTORS MAY BE REQUIRED TO COMPLETE YOUR INSTALLATION
- Not for use with metallic sinks or counters.
- Some building codes may require tempered water delivered through an approved water-temperature limiting device for public lavatories.

Diagram A - Dimensions


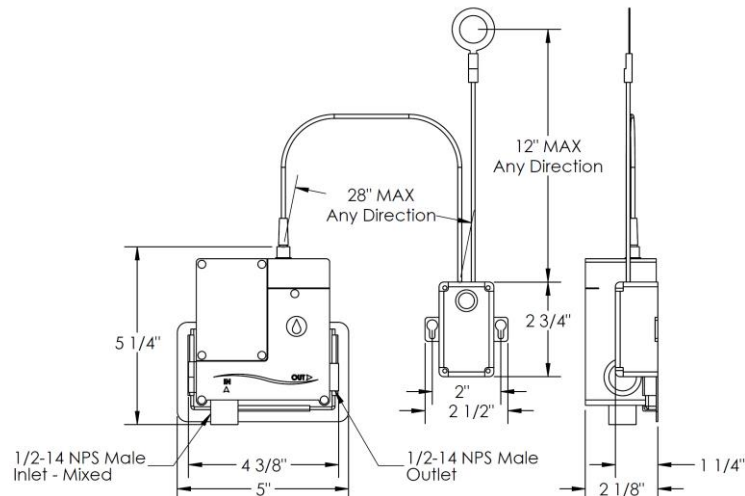


Diagram B – Parts Checklist

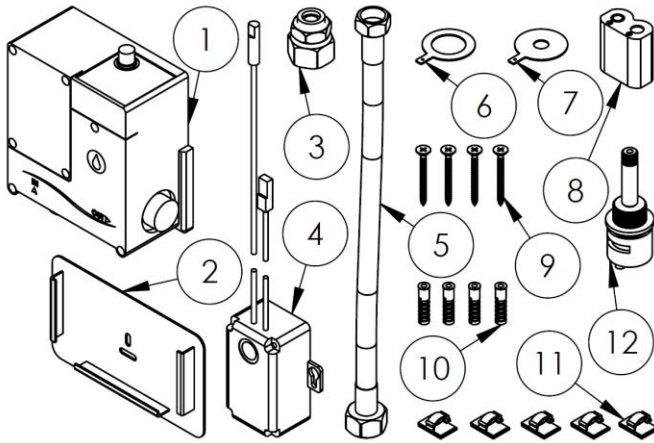


#	Description	Qty.
1	Solenoid Valve	1
2	Solenoid Bracket	1
3	Tee Adaptor (30+31+32)	1
4	Electrical Box	1
5	Spout Hose	1
6	Sensor Washer L	1
7	Sensor Washer S	1
8	Battery (not included)	1
9	Wood Screw	4
10	Drywall Anchor	4
11	Wall Clip	5
12	Temperature Cartridge	1

Installation

1. Flush the lines of all dirt and debris.
Note: Failure to completely flush lines will cause valve failure and will void the warranty.
2. Close water supply.
3. Assemble spout assembly with **Sensor Washer (6 or 7)** onto deck as shown in Diagram C.

Diagram C – Spout Assemblies

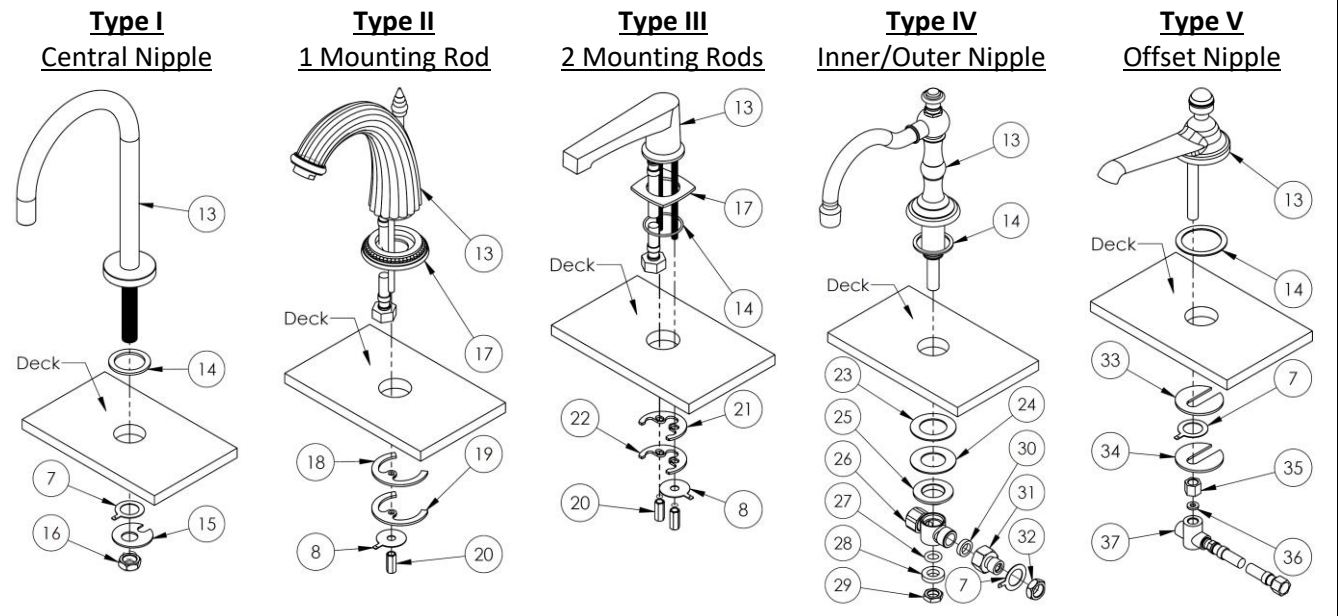


#	Description	#	Description	#	Description
7	Sensor Washer L	20	Mounting Nut	29	Lock Nut
8	Sensor Washer S	21	Rubber Mounting Washer	30	Adapter Gasket
13	Spout	22	Steel Mounting Washer	31	Adapter
14	Deck Gasket	23	Rubber Mounting Washer	32	Lock Nut
15	Steel Mounting Washer	24	Steel Mounting Washer	33	Rubber Mounting Washer
16	Lock Nut	25	Mounting Nut	34	Steel Mounting Washer
17	Base Ring	26	Tee	35	Lock Nut
18	Rubber Mounting Washer	27	Tee Gasket	36	Tee Gasket

19	Steel Mounting Washer	28	Tee Washer	37	Tee
----	-----------------------	----	------------	----	-----

Note: Refer to Diagram D for Steps 4 – 9.

4. Unscrew **Cartridge Nut (41)** from **Mixing Valve Body (38)**, making sure not to damage the outside threads on **Mixing Valve Body (38)**.
5. Pull **Progressive Cartridge (39)** out from **Mixing Valve Body (38)**. **Progressive Cartridge (39)** may be discarded or retained to convert back to manual system.
6. Unscrew **Packing Nut (40)** from **Progressive Cartridge (39)** and screw onto **Temperature Cartridge (12)**.
7. Place **Temperature Cartridge (12)** into **Mixing Valve Body (38)**, ensuring pin lines up with hole and cartridge completely seats.
8. Screw **Cartridge Nut (41)** into **Mixing Valve Body (38)** and tighten to 12 – 14 ft lb of torque. A torque wrench may be used to achieve the correct tightness.
9. Assemble handle trim and valve onto deck.

Diagram D – Cartridge Change

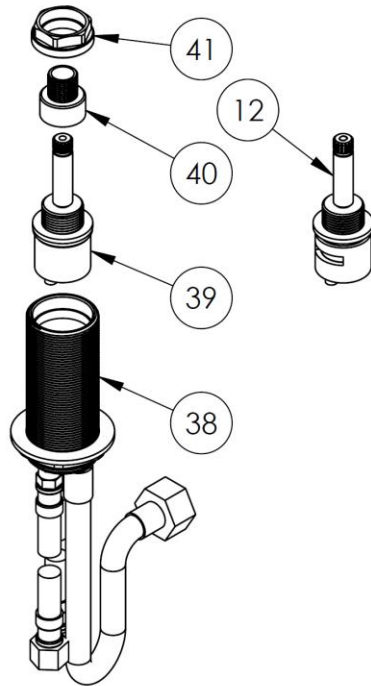

#	Description
12	Temperature Cartridge
38	Mixing Valve Body
39	Progressive Cartridge
40	Packing Nut
41	Cartridge Nut


Note: Refer to Diagrams A, B and E for Steps 10 – 14.

10. Position **Solenoid Bracket (2)** on the wall so **Solenoid Inlet (42)** is within 12" of premixed water supply and **Solenoid Outlet (43)** is within 12" of **Spout Inlet (44 or 45)**. Secure with 2 **Wood Screws (9)**. **Drywall Anchors (10)** may be used if securing to drywall.
11. Slide **Solenoid Valve (1)** into **Solenoid Bracket (2)**. Solenoid should be oriented with the inlet on the bottom and the outlet on the right.
12. Connect **Cold Supply Hose (46)** (marked with a blue dot on the bottom of the **Mixing Valve Body (38)**) to cold water supply and **Hot Supply Hose (47)** (marked with a red dot on the bottom of the **Mixing Valve Body (38)**) to hot water supply (if not already done).
13. Connect **Mixed Outlet Hose (48)** to **Solenoid Inlet (42)**.
14. Connect **Spout Assembly (49)** to **Solenoid Valve (1)**:
 - a. For spout Types I & IV, connect **Spout Hose (5)** to **Spout Inlet (44)** and to **Solenoid Outlet (43)**.


b. For Spout Types II, III & V, connect **Spout Inlet (45)** to **Solenoid Outlet (43)**.

Diagram E – Solenoid Connection

Types I & IV

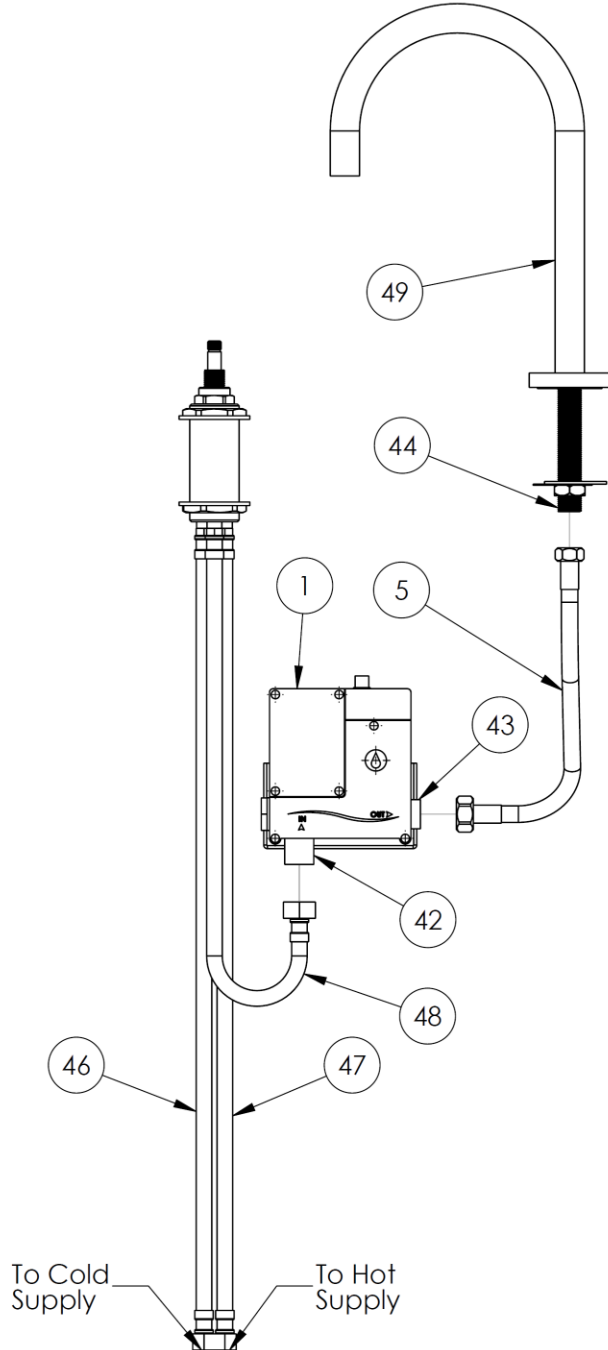

Types II, III & V

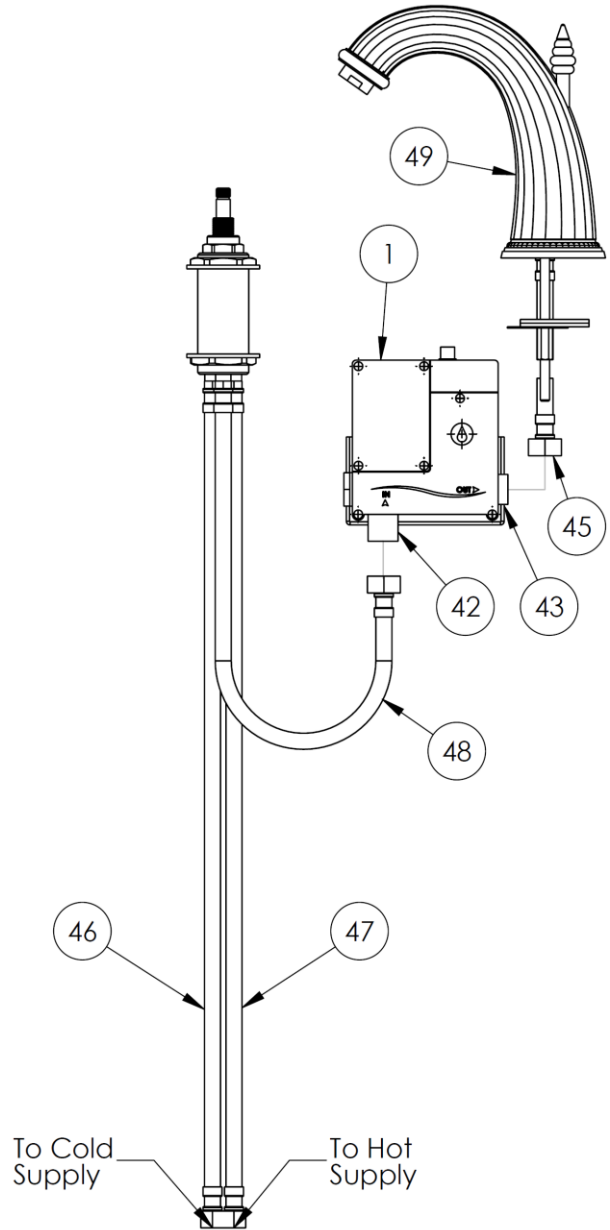

#	Description	#	Description
1	Solenoid Valve	45	Spout Inlet (Types II, III & V)
5	Spout Hose	46	Cold Supply Hose
42	Solenoid Inlet	47	Hot Supply Hose
43	Solenoid Outlet	48	Mixed Outlet Hose

44 Spout Inlet (Types I & IV)


49 Spout Assembly

Note: Refer to Diagrams B and F for Steps 15 – 21.

15. Position **Electrical Box (4)** on the wall so the top is within 12" of the **Sensor Washer (6 or 7)** and within 28" of the **Solenoid Wire Connector (50)** and secure with 2 **Wood Screws (10)**. **Drywall Anchors (11)** may be used if securing to drywall.
16. Connect **Sensor Wire (51)** to **Sensor Washer (6 or 7)** and **Solenoid Wire (52)** to **Solenoid Wire Connector (50)**.
Note: **Sensor Washer (6 or 7)** may be bent to accommodate **Sensor Wire (51)**.
17. Route **Sensor Wire (51)** and **Solenoid Wire (52)** so they do not come in contact with each other, with the hoses or with any metal. **Wall Clips (11)** can be used to assist with wire routing.
18. Loosen 4 screws on front of **Electrical Box (4)** to remove front cover. Insert **Battery (8)** into **Electrical Box (4)** (+ to +).
19. **Red LED (53)** will light and initial calibration will begin. After about 5 seconds, **Red LED (53)** turns off indicating initial calibration is complete. Replace front cover and tighten screws.
Note: Do not touch the faucet during initial calibration. If faucet is touched, remove battery and return to Step 11.
20. Open water supplies and activate faucet so water runs through **Spout (13)**. Check all connections for leaks.
21. Activate faucet 10 times for final calibration:
 - c. For DT1, touch **Spout (13)** to turn on. Remove hand and allow to run for 10 seconds. Touch again to turn off. Wait 10 seconds before next activation.
 - d. For DTM2, touch **Spout (13)** to turn on. Remove hand and allow to run until it turns off automatically, about 12 seconds. Wait 10 seconds before next activation.
 - e. For DP3, move hand near **Spout (13)** to turn on and leave hand near **Spout (13)** to allow to run for 10 seconds. Remove hand to turn off. Wait 10 seconds before next activation.
 - f. For DPM4, move hand near **Spout (13)** to turn on. Remove hand and allow to run until it turns off automatically, about 12 seconds. Wait 10 seconds before next activation.

Note: Sensor continuously learns environment as it is used. It may take up to a week of regular use to fully calibrate.

Diagram F – Sensor Connection

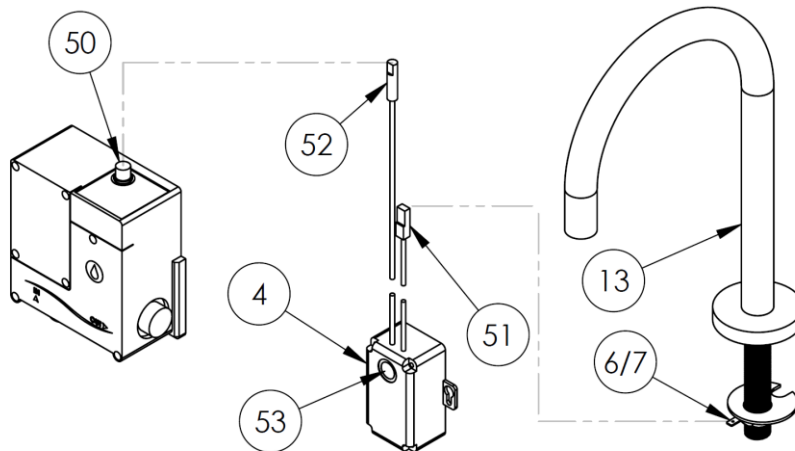

#	Description
4	Electrical Box
6/7	Sensor Washer
13	Spout
50	Solenoid Wire Connector
51	Sensor Wire
52	Solenoid Wire
53	Red LED/White Button

Cleaning

1. To clean the spout, press once on **White Button (53)** to enter cleaning mode for 30 seconds. **Red LED (53)** will begin flashing twice repeatedly.
2. During this time, spout may be cleaned without water turning on by touch or proximity.

3. When cleaning mode ends, **Red LED (53)** will stop flashing and operation will return to normal.

Troubleshooting

Red LED Code	Meaning	Remedy
Solid Light	Calibration	Wait for light to turn off. Do not touch faucet until light turns off.
1 Flash	Battery level is low	Replace battery (type CR-P2)
2 Flashes	Cleaning mode or safety timeout is activated	Wait for light to stop flashing
3 Flashes	Bad connection	Check installation. Make sure sensor wire and solenoid wire are not touching each other or any metal. Make sure sink and counter are not metallic. Remove and replace battery, wait for Red LED to turn off and follow Step 18 above.

Malfunction	Cause	Remedy
Faucet does not turn on	Sensor stop	Check Electrical Box for flashing Red LED. Follow instructions above.
	Water supply is off	Turn water supply on.
Faucet turns on by itself	Sensitivity too high	Adjust sensitivity. Press and hold the White Button until Red LED is permanently lit, about 10 seconds. When finger is removed, Red LED will light in a series of flashes to indicate sensitivity level. 1 flash is the lowest and 5 flashes is the highest. Press the white button 1 time for each level to be changed. When desired level is reached, wait for series of flashes from Red LED to confirm level. Note: Level should be adjusted 1 step at a time and tested.
Faucet functions intermittently	Calibration not complete	Follow Step 18 above. It may take up to one week of regular use for sensor to fully learn environment.
	Sensitivity too low	Adjust sensitivity. Press and hold the White Button until Red LED is permanently lit, about 10 seconds. When finger is removed, Red LED will light in a series of flashes to indicate sensitivity level. 1 flash is the lowest and 5 flashes is the highest. Press the white button 1 time for each level to be changed. When desired level is reached, wait for series of flashes from Red LED to confirm level. Note: Level should be adjusted 1 step at a time and tested.
	Bad connection	Check installation. Make sure sensor wire and solenoid wire are not touching each other or any metal. Make sure sink and counter are not metallic. Remove and replace battery, wait for Red LED to turn off and follow Step 18 above.
Faucet does not turn off	Sensitivity too high	Adjust sensitivity. Press and hold the White Button until Red LED is permanently lit, about 10 seconds. When finger is removed, Red LED will light in a series of flashes to indicate sensitivity level. 1 flash is the lowest and 5 flashes is the highest. Press the white button 1 time for each level to be changed. When desired level is reached, wait for series of flashes from Red LED to confirm level. Note: Level should be adjusted 1 step at a time and tested.
	Bad connection	Check installation. Make sure sensor wire and solenoid wire are not touching each other or any metal. Make sure sink and counter are not metallic. Remove and replace battery, wait for Red LED to turn off and follow Step 18 above.

For technical support, please call 718-257-2800

